


Ikegami®

15" LCD Monitor with Audio and Tuner

V-R151P

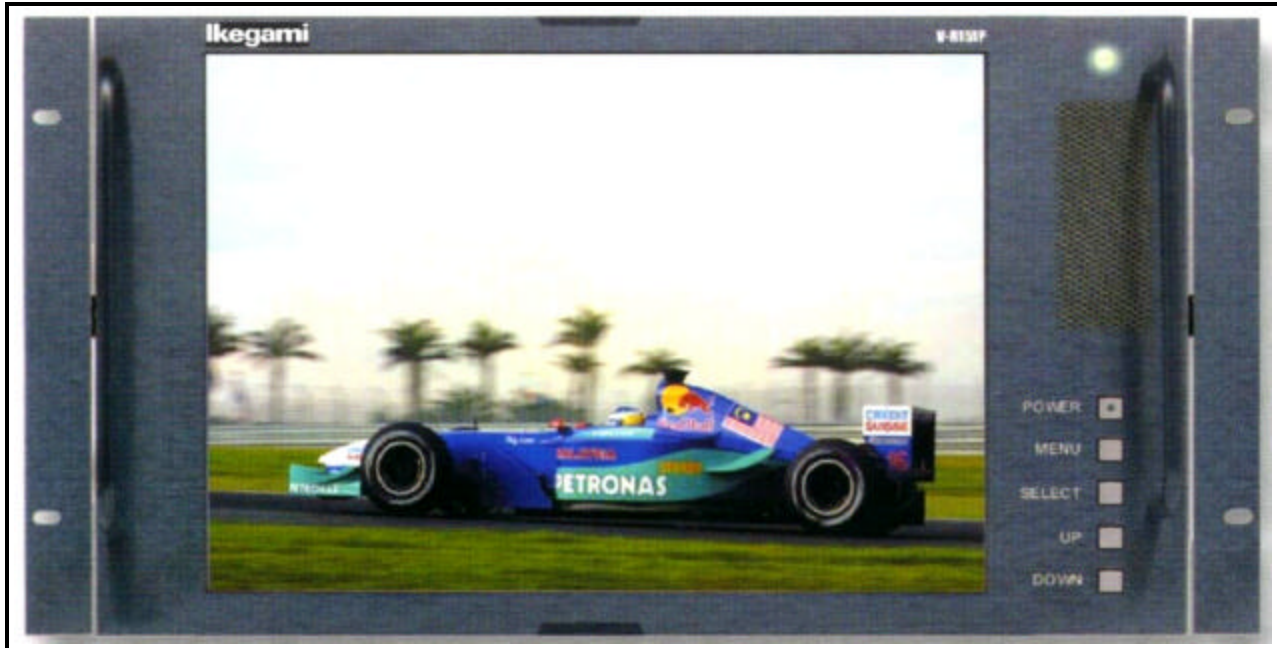

The V-R151P is a 15" LCD rack mounted unit six rack spaces high that has a 125 channel TV Tuner and Audio built-in. This panel has 1024 x 768 pixels making it a truly high resolution video LCD panel. The built-in audio system has a stereo input that is mono compatible. For added flexibility, this unit has a green tally light and can accommodate NTSC/PAL composite video, TV, S-video or XGA for computer monitoring. Like all V-R Series, this unit is constructed of steel and aluminum and can tilt 90 degrees while rackmounted. Unit comes complete with power supply and owners manual.

■ SPECIFICATIONS:

Viewing Area:	11.69" (H) x 9.12" (V)	Video Input:	1 X Composite NTSC / PAL
Aspect Ratio:	4 : 3		S-video (Y + C)
Pixels:	1024 (H) x 768 (V)		TV tuner and XGA
Dot Pitch:	0.29mm x 0.3mm	Audio input:	2 X RCA unbalanced
Display:	15" LCD	Dimensions:	Width 19.12 Inch
Brightness:	250 cd		Height 10.5 Inch
Power Requirement:	12 VDC, 3 Amp.		Depth 2.17 Inch

Design and specifications are subject to change without notice.

0502JTLr1

Ikegami Ikegami Electronics (U. S. A.) Inc.

■ URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	526 Bluebird Lane, Red Oak, TX 75154 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227